

Hyundai Ver.: 47.80

Systems	Sub System	System Info.	Read-Clear Dtc	Data Stream	Actuation	Special Functions
Korea						
ATOS						
ENGINE CONTROL GASOLINE			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete
ENGINE CONTROL LPG			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SEMI-AUTO(SAT)			<i>err. Code</i>	<i>data</i>		
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
NEW CLICK						
ENGINE CONTROL SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL DIESEL		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. Code</i>	<i>data</i>		
CLICK						
ENGINE CONTROL SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. Code</i>	<i>data</i>		
VERNA(MC)						
ENGINE		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
ELEC.POWER SREERING		<i>info</i>	<i>err. Code</i>	<i>data</i>		
FULL AUTO AIR/CON. SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
NEW VERNA						
ENGINE CONTROL SYSTEM	UNLEAD(CVVT)		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	

	UNLEAD(CVVT AMERICAN APPLICATION)		<i>err. Code</i>	<i>data</i>		
	LEAN BURN		<i>err. Code</i>	<i>data</i>		
AUTOMATIC TRANSAXLE SYSTEM	UNLEAD		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	LEAN BURN		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
VERNA						
ENGINE CONTROL SYSTEM	UNLEAD 1.3L SOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L SOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L DOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	LEAN BURN	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
ACCENT						
ENGINE CONTROL SYSTEM	UNLEAD 1.3 SOHC 9597		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.3 SOHC 98		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 SOHC 95		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 SOHC 9698		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 SOHC 9597		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 SOHC 98		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 DOHC MAF		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 DOHC MAP		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	LEAN BURN 1.5 DOHC 9899		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>		
AIRBAG SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>		
EXCEL						
ENGINE CONTROL SYSTEM	ENGINE-SOHC		<i>err. Code</i>	<i>data</i>		
AUTOMATIC TRANSAXLE			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SCOUPE						
ENGINE CONTROL SYSTEM	UNLEAD SOHC 9192		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	

	UNLEAD SOHC 9394		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD SOHC 95		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD SOHC TURBO 95		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD SOHC TURBO 9294		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
LAVITA						
ENGINE CONTROL SYSTEM	1.5L		<i>err. Code</i>	<i>data</i>		
	1.8L		<i>err. Code</i>	<i>data</i>		
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
AIRBAG SYSTEM			<i>err. Code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
I30						
ENGINE CONTROL	GASOLINE	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
A/C		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>	<i>err. Code</i>	<i>data</i>		
EPS		<i>info</i>	<i>err. Code</i>	<i>data</i>		
SMK		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AVANTE HD						
ENGINE CONTROL GASOLINE	1.6 CVVT	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 CVVT	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL DIESEL		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	1.6 CVVT	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 CVVT	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
A/C		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
EPS		<i>info</i>	<i>err. Code</i>	<i>data</i>		

BODY CONTROL MODULE		<i>info</i>	<i>err. Code</i>	<i>data</i>		
NEW AVANTE XD						
ENGINE CONTROL GASOLINE	1.5/1.6L		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Idle Speed Adjustment
	2.0L		<i>err. Code</i>	<i>data</i>		
ENGINE CONTROL DIESEL		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	1.5/1.6 IMPROVED		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 NEW GENERATION		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. Code</i>	<i>data</i>		
AVANTE XD						
ENGINE CONTROL SYSTEM	1.5 LEAN BURN		<i>err. Code</i>	<i>data</i>		
	1.5 DOHC		<i>err. Code</i>	<i>data</i>		
	2.0 CVVT AMERICAN APPLICATION		<i>err. Code</i>	<i>data</i>		
	2.0 CVVT		<i>err. Code</i>	<i>data</i>		
AUTOMATIC TRANSAXLE	1.5 IMPROVE MODEL		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	1.5 IMPROVED MODEL		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 NEW CENERATION		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. Code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AVANTE						
ENGINE CONTROL SYSTEM	UNLEAD 1.5 SOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 DOHC 96		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5 DOHC 9798		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6-2.0 DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	LEAN BURN 99		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM	-1999		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	-2000		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. Code</i>	<i>data</i>		
ELANTRA						

ENGINE CONTROL SYSTEM	SOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>		
SRS-AIRBAG			<i>err. Code</i>	<i>data</i>		
TUSCANI						
ENGINE CONTROL SYSTEM	2.0 CVVI AMERICAN APPLICATION	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 CVVI	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.7 V6 DOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
TIBURON						
ENGINE CONTROL SYSTEM	UNLEAD 1.6-2.0 DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.6-2.0 DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	-1999		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2000-		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>		
SRS-AIRBAG	97-99MY		<i>err. Code</i>	<i>data</i>		
	99 F/LIFT	<i>info</i>	<i>err. Code</i>	<i>data</i>		
SONATA(NF)						
ENGINE CONTROL GASOLINE	2.0/2.4	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	2.0/2.4 +ETS	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	LEAD 3.0L	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0/2.4(CAN)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0/2.4+ETC(CAN)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	3.3 LEAD(CAN)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPI	LPI(EMS ECU)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	LPI(IFB ECU)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL DIESEL		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	

AUTOMATIC TRANSAXLE	2.0/2.4L	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 3.0L	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0/2.4(CAN)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	3.3 LEAD(CAN)		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
FULL AUTO AIR/CON. SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. Code</i>	<i>data</i>		
ELEC.CONTROL SUSPENSION			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODELE	LANE SENSOR APPLICATION	<i>info</i>	<i>err. Code</i>		<i>actuat.</i>	
	LANE SENSOR AMERICAN APPLICATION	<i>info</i>	<i>err. Code</i>		<i>actuat.</i>	
EF SONATA						
ENGINE CONTROL GASOLINE	1.8/2.0L DOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.5 V6-DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG	2.0 LPG SIRIUS	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 LPG(2002) BETA	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 LPG(2003) BETA	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	1.8/2.0		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2,5		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	CVT		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SONATA III						
ENGINE CONTROL GASOLINE	SOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>		
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
SONATA II						

ENGINE CONTROL GASOLINE	SOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	V6-DOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>		
AIRBAG SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>		
SONATA						
ENGINE CONTROL GASOLINE	SOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DOHC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	V6-DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
TG GRANDEUR (AZERA)						
ENGINE CONTROL GASOLINE	2.7L/3.3L/3.8L KWP		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.4L CAN	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	3.3L/3.8L/ KOBD CAN	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.7 L KOBD CAN	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE DIESEL	2.2 VGT EURO 4 DIE	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG	LPI(EMS ECU)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	LPI(IFB ECU)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM	2.7L/3.3L/3.8L/LPI KWP		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.4L CAN	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	2.7L/3.3L/3.8L KOBD CAN		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL(VGT)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AIRBAG SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>		
FULL ATUO AIR/CON.SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. Code</i>	<i>data</i>		
BODY CONTROL MODULE	BODY CONTROL MODULE	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	DRIVER DOOR MODULE(DDM)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	ASSIST DOOR MODULE(ADM)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	

	IMS	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	TILT&TELESCOPE(TILT)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	USER OPTION	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SMART KEY SYSTEM	IFU	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	PIC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	PIC	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AHLS SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>		
NEW GRANDEUR XG						
ENGINE CONTROL GASOLINE	2.0/2.5 GASOLINE	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	3.0+ETS GASOLINE	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG/LPI	2.7 LPG	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	02 LPI(EMS ECU)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	LPI(IFB ECU)	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2.0/2.5/2.7L	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	3.0L	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. Code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
GRANDEUR XG						
ENGINE CONTROL SYSTEM	2.0/2.5 GASOLINE		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	3.0+ETS GASOLINE		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2.0/2.5L	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	3.0L	<i>info</i>	<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG			<i>err. Code</i>	<i>data</i>		
MARCIA						
ENGINE CONTROL SYSTEM	DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	V6-DOHC		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. Code</i>	<i>data</i>		
SRS-AIRBAG			<i>err. Code</i>	<i>data</i>		
EQUUS						
ENGINE CONTROL SYSTEM	3.0L	<i>info</i>	<i>err. Code</i>			

	3.0L+ETS	<i>info</i>	<i>err. Code</i>			
	3.5L+ETS	<i>info</i>	<i>err. Code</i>			
	4.5L GDI		<i>err. Code</i>			
	4.5L MPI	<i>info</i>	<i>err. Code</i>			
	3.8L LAMDA	<i>info</i>	<i>err. Code</i>			
AUTOMATIC TRANSAXLE	3.0/3.5L	<i>info</i>	<i>err. Code</i>			
	4.5L	<i>info</i>	<i>err. Code</i>			
	3.8L LAMDA	<i>info</i>	<i>err. Code</i>			
VDC	MELCO TYPE		<i>err. Code</i>			
	CTC TYPE(2009)		<i>err. Code</i>			
ANTHLOCK BRAKE SYSTEM	ITI TYPE	<i>info</i>	<i>err. Code</i>			
	CTC TYPE(2009)	<i>info</i>	<i>err. Code</i>			
SRS-AIRBAG	-2001 YEAR	<i>info</i>	<i>err. Code</i>			
	-2002 YEAR	<i>info</i>	<i>err. Code</i>			
ECS	ECS		<i>err. Code</i>	<i>data</i>	<i>actuat.</i>	
	ACTIVE ECS			<i>data</i>	<i>actuat.</i>	
TCS	ITI TYPE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CTC TYPE(2009)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
EPS		<i>info</i>	<i>err. code</i>	<i>data</i>		
AHLS		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY	-2002(LAN)	<i>info</i>	<i>err. code</i>	<i>data</i>		
	2002(LAN)	<i>info</i>	<i>err. code</i>	<i>data</i>		
KEY				<i>data</i>	<i>actuat.</i>	
NEW DYNASTY						
ENGINE CONTROL GASOLINE	DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	V6-DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM	-2004		<i>err. code</i>	<i>data</i>		
	2005-		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
AIRBAG SYSTEM	AIRBAG(OLD:98MY)	<i>info</i>	<i>err. code</i>	<i>data</i>		
	AIRBAG(NEW:98MY)	<i>info</i>	<i>err. code</i>	<i>data</i>		
DYNASTY						

ENGINE CONTROL GASOLINE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>			
AIRBAG SYSTEM	AIRBAG(OLD:98MY)	<i>info</i>	<i>err. code</i>			
	AIRBAG(NEW:98MY)	<i>info</i>	<i>err. code</i>			
NEW GRANDEUR						
ENGINE CONTROL GASOLINE	SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	V6-SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	V6-DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM	JAPAN ELECTROMOTION TYPE		<i>err. code</i>	<i>data</i>		
	LUCAS TYPE		<i>err. code</i>	<i>data</i>		
AIRBAG SYSTEM	AIRBAG(OLD:98MY)	<i>info</i>	<i>err. code</i>	<i>data</i>		
	AIRBAG(NEW:98MY)	<i>info</i>	<i>err. code</i>	<i>data</i>		
GRANDEUR						
ENGINE CONTROL GASOLINE	SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	V6-SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
GRACE						
ENGINE CONTROL GASOLINE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
LIBERO						
ENGINE CONTROL GASOLINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
AIRBAG SYSTEM			<i>err. code</i>	<i>data</i>		
PORTER II						
ENGINE CONTROL GASOLINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANIT-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
NEW PORTER						
ENGINE CONTROL GASOLINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
STAREX						
Grand starex	ENGINE CONTROL DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	AUTOMATIC TRANSAXLE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ANIT-LOCK BRAKE SYSTEM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	AIRBAG SYSTEM	<i>info</i>	<i>err. code</i>	<i>data</i>		
	AC	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	FUEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	BCM	<i>info</i>		<i>data</i>	<i>actuat.</i>	
before 2007	ENGINE CONTROL DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ENGINE CONTROL LPG		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	AUTOMATIC TRANSAXLE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ANIT-LOCK BRAKE SYSTEM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	AIRBAG SYSTEM	<i>info</i>	<i>err. code</i>	<i>data</i>		
TAXI						
ENGINE CONTROL		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
VERACURZ						
ENGINE CONTROL GASOLINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL DIESEL		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANT-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
AC		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
EPS		<i>info</i>	<i>err. code</i>	<i>data</i>		
AHLS		<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BCM		<i>info</i>		<i>data</i>	<i>actuat.</i>	
SMART KEY		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELE. TAIL GATE		<i>info</i>	<i>err. code</i>	<i>data</i>		
TERRACAN						

ENGINE CONTROL SYSTEM	2.5L (TCI)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.9L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.5L GASOLINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ATUOMATIC TRANSAXLE	3.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.9L (-2003)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.9L (2004-)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD CONTROL		<i>info</i>	<i>err. code</i>			
GALLOPER II						
ENGINE CONTROL GASOLINE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL DIESEL			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG	LPG -99		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LPG 2000 YEAR(3 GENERATION)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM	-2001		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	2001-		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
GALLOPER						
ENGINE CONTROL SYSTEM	SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	V6-SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SANTAMO						
ENGINE CONTROL GASOLINE	SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DOHC UNLEAD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DOHC 4WD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG	LPG -99	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LPG 2000 YEAR(3 GENERATION)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG	-2001		<i>err. code</i>	<i>data</i>		
	2002-		<i>err. code</i>	<i>data</i>		
TRAJET XG						
ENGINE CONTROL GASOLINE	2.0 DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	2.7 DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL DIESEL	WGT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	VGT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FUEL FIRED HEATER SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SANTAFE(CM)						
ENGINE CONTROL	2.0/2.2L VGT(CPF-)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0/2.2L VGT(CPF+)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.2L VGT EURO 3(KWP)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Injector Specific Data
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANIT-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON. SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
4WD CONTROL		<i>info</i>	<i>err. code</i>			
SMART KEY SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AHLS SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>		
SANTAFE						
ENGINE CONTROL GASOLINE	2.0 DOHC	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.7 DOHC	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL DIESEL	WGT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	VGT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE CONTROL LPG		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI LOCK BRAKE SYSTEM	2WD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	4WD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD CONTROL		<i>info</i>	<i>err. code</i>			
TUCSON						
ENGINE CONTROL GASOLINE	2.0 WGT EURO 3 DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	2.0 CVVT SIEMENS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 EURO 4 DIESEL(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 EURO 4 DIESEL(KWP)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Version Configuration
AUTOMATIC TRANSAXLE	AUTOMATIC TRANSAXLE(DIESEL)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 WGT EURO 3 DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 EURO 4 DIESEL(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0 CVVT SIEMENS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD SYSTEM			<i>err. code</i>			
BODY CONTROL MODULE	LANE SENSOR APPLICATION		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LANE SENSOR AMERICAN APPLICATION		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
Non Korea						
ATOS F LIFT 04 ALL						
ENGINE SYSTEM	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD MEX	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	IDLE CO ADJUSTMENT
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
ATOS F LIFT 06 ALL						
ENGINE SYSTEM	UNLEAD 1.0L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete
	UNLEAD 1.1L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete

	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD MEX	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.0L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Idle Speed Adjustment
	LEAD 1.1L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Idle Speed Adjustment
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
ATOS 1998-2004						
ENGINE L4SOHC	UNLEAD GENERAL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD EOBD		<i>err. code</i>	<i>data</i>		
	UNLEAD MEX		<i>err. code</i>	<i>data</i>		
	UNLEAD IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD GENERAL (SANTRO)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD GENERAL (SANTRO)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SAT SYSTEM						
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
AIRBAG SYSTEM			<i>err. code</i>	<i>data</i>		

IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
-------------	--	--	--	-------------	--	---

GETZ 2003-2004

ENGINE(GASOLINE)	UNLEAD GEN		<i>err. code</i>	<i>data</i>		
	LEAD ALL		<i>err. code</i>	<i>data</i>		
	UNLEAD EOBD		<i>err. code</i>	<i>data</i>		
ENGINE-DIESEL			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS AIRBAG	SRS AIRBAG(KWP ADDR)	<i>info</i>	<i>err. code</i>	<i>data</i>		
	SRS AIRBAG		<i>err. code</i>	<i>data</i>		
IMMOBILIZER	GASOLINE		<i>err. code</i>			
	DIESEL		<i>err. code</i>			
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		

GETZ 2006

ENGINE (GASOLINE)	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Idle Speed Adjustment
	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE (DIESEL)		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	INJECTOR SPECIFIC DATA
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		

IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
ACCENT 2006-						
ENGINE (DIESEL)		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. ENGINE TEST FUNCTION
ENGINE(GASOLINE)	UNLEAD_1.6L(CVVT)_GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD_1.6L(CVVT)_EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD_1.6L(CVVT)_ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT

	UNLEAD_1.4L(DOHC)_GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD_1.4L(DOHC)_EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD_1.4L(DOHC)_ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
AUTOMATIC TRANSAXLE	GASOLINE_A4AF3	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	DIESEL_A4CF2	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	AIR BLEEDING MODE
AC		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
EPS		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
ACCENT 2003-2004						
ENGINE (GASOLINE)	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>		
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>		

	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>		
	UNLEAD 03MY OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>		EVAP. TEST(DMTL TEST)
	UNLEAD 04MY OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	EVAP. TEST(DMTL TEST)
ENGINE DIESEL	GENERAL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG	SRE-LC/HMC	<i>info</i>	<i>err. code</i>	<i>data</i>		
	SRE-SMART(DUAL.STAGE)	<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER	GASOLINE			<i>data</i>		
	DIESEL			<i>data</i>		
ACCENT 2000-2002						
ENGINE L4-SOHC	LEAD ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	IDLE CO ADJUSTMENT
	UNLEAD(GENERAL) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD(EOBD) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD(OBDII) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	EVAP. TEST(DMTL TEST)
	UNLEAD(GENERAL India)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4-DOHC	LEAD ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	IDLE CO ADJUSTMENT
	UNLEAD(GENERAL) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD(EOBD) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD(OBDII) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	EVAP. TEST(DMTL TEST)
	UNLEAD(GENERAL India)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE DIESEL			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
IMMOBILIZER	GASOLINE		<i>err. code</i>			
	DIESEL			<i>data</i>		

ACCENT 1995-1999

ENGINE L4-SOHC	UNLEAD 1.3L 95-97MY GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.3L 95-97MY IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.3L 98MY GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.3L 98MY IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 95MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 95MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 95-97MY KOR		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 98MY KOR		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.5L 95MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.5L 96-99MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 96-97MY OBD-II		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 98-99MY OBD-II		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4DOHC	UNLEAD 1.5L 95-97MY MAF		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 97MY IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 98-99MY IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 97-98MY MAP		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 96-97MY OBD-II		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5L DOHC MAF		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5L DOHC MAP		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5L DOHC L/B		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.3L SOHC ..97		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.3L SOHC 98		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5L SOHC ..97		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
1.5L SOHC 98		<i>err. code</i>	<i>data</i>	<i>actuat.</i>		
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANT-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>		
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		

EXCEL 1990-1994

ENGINE L4SOHC	90-94MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5L SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5L SIEMENS		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM	90-94MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	1.5L SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5L SIEMENS		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SCOUPE 1991-1996						
ENGINE L4SOHC	UNLEAD 94-96MY GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 92-94MY ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 91-92MY ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 94-96MY FED		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 94-96MY CAL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 93-96MY ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SCOUPE LS		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SCOUPE 91-92MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SCOUPE 93-94MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SCOUPE 95MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SCOUPE RURBO 9294MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SCOUPE RURBO 95MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>		
ENGINE L4DOHC TRUBO	UNLEAD 94-96MY ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 92-94MY ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 92MY KOR		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
MATRIX 2002						
ENGINE(GASOLINE)	LEAD 1.6L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	IDLE CO ADJUSTMENT
	UNLEAD 1.6L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.8L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2. VERSION CONFIGURATION
	UNLEAD 1.8L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Idle Speed Adjustment

	UNLEAD 1.8L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Idle Speed Adjustment
ENGINE(DIESEL)	GENERAL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5 D-ENGINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	ENGINE TEST FUNCTION
	1.5 U-ENGINE VGT(EURO-3)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.5 U-ENGINE VGT(EURO-4)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	INJECTOR SPECIFIC DATA
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTIFLOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
IMMOBILIZER	DIESEL(D1.5/U1.5 EURO3)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE

	DIESEL(U1.5 EURO4)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
ELANTRA 2007-						
ENGINE(DIESEL)		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. ENGINE TEST FUNCTION
ENGINE(GASOLINE)	UNLEAD_1.6L_GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD_1.6L_EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD_1.6L_ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
	UNLEAD_1.6L_OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD_2.0L_GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD_2.0L_EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES

	LEAD_2.0L_ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.IDLE CO ADJUSTMENT
	UNLEAD_2.0L_OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
AUTOMATIC TRANSAXLE	1.6_GASOLINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	2.0_GASOLINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	1.6_DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTHLOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	STEERING ANGLE SENSOR
AC		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	ACU_GEN	<i>info</i>	<i>err. code</i>	<i>data</i>		
	ACU_NAS	<i>info</i>	<i>err. code</i>	<i>data</i>		
	WCS	<i>info</i>	<i>err. code</i>	<i>data</i>		
BCM	GENERAL	<i>info</i>		<i>data</i>	<i>actuat.</i>	
	NAS	<i>info</i>		<i>data</i>	<i>actuat.</i>	
EPS		<i>info</i>	<i>err. code</i>	<i>data</i>		ASP CALIBRATION

IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
ELANTRA 2004-2006						
ENGINE(GASOLINE)	LEAD 1.6L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6L EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.8/2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.8/2.0L(-CVVT) GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ULLEAD 1.8/2.0L(+CVVT) GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ULLEAD 1.8/2.0L(CVVT) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.0L(CVVT) OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE(DIESEL)	EURO-3 (KWP)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	EURO-4 VGT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	INJECTOR SPECIFIC DATA
AUTOMATIC TRANSAXLE	1.6L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.8/2.0L(SIEMENS PCM)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		

IMMOBILIZER	1.6L(GASOLINE)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	1.8/2.0L(GASOLINE)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE

ELANTRA 2001-2003

ENGINE(GASOLINE)	LEAD 1.6L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	IDLE CO ADJUSTMENT
	UNLEAD 1.6L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6L EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.8/2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION

	UNLEAD 1.8/2.0L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.8/2.0L EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.0L(SULEV) OBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
	UNLEAD 2.0L(SULEV) OBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
ENGINE(DIESEL)			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	1.6L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.8/2.0L(MELCO TCM)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1.8/2.0L(SIEMENS PCM)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTHLOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
IMMOBILIZER	1.8/2.0L(GASOLINE)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE

	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
ELANTRA 1996-2000						
ENGINE L4SOHC	UNLEAD 1.5L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.5L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4DOHC	UNLEAD 1.5L 96MY KOR		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 97-98MY KOR		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6-2.0L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6-2.0L IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.6-2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 96MY OBDII		<i>err. code</i>			
	UNLEAD 97MY OBDII		<i>err. code</i>			
	UNLEAD 98MY OBDII		<i>err. code</i>			
AUTOMATIC TRANSAXLE	-99MY(A4BF1)		<i>err. code</i>	<i>data</i>		
	2000MY(A4BF2)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
ELANTRA 1992-1995						
ENGINE L4SOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4DOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>		
AIRBAG SYSTEM			<i>err. code</i>	<i>data</i>		
HD COUPE 2002-						
ENGINE	LEAD 1.6L ALL		<i>err. code</i>	<i>data</i>		IDLE CO ADJUSTMENT

UNLEAD 1.6L GEN		<i>err. code</i>	<i>data</i>		
UNLEAD 1.6L EOBD		<i>err. code</i>	<i>data</i>		
LEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
UNLEAD 2.0L(-CVVT) GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
UNLEAD 2.0L(+CVVT) GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.VERSION CONFIGURATION
UNLEAD 2.0L(-CVVT) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.0L(+CVVT) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.0L(-CVVT) OBD-II		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.0L(CVVT) OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
LEAD 2.7L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.7L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.7L(TI) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.7L(ZR) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.7L(TI) OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
UNLEAD 2.7L(ZR) OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES

AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>			
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AHLS SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER	UNLEAD 1.6/2.0L IMM			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
HD COUPE 1997-2001						
ENGINE L4DOHC	UNLEAD 1.6-2.0L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6-2.0L IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.6-2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	EOBD 2001MY			<i>data</i>		
	OBD-II 97MY			<i>data</i>		
	OBD-II 98MY				<i>data</i>	
	OBD-II 99-00MY				<i>data</i>	
AUTOMATIC TRANSAXLE	97-99MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2000MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG	97-99MY		<i>err. code</i>	<i>data</i>		
	2000MY	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0/2.4L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED
SONATA(YF)10						

ENGINE(GASOLINE)	GDI	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES 2.AUTO DETECTED
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.AIR BLEEDING MODE 2.VARIANT CODING
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING CHANGING 2.TEACHING 3.IMMOBILIZER RESET 4.LIMP HOME MODE 5.SMATRA NEUTRAL
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SONATA(F/L)						
ENGINE(GASOLINE)	UNLEAD 2.0L(NON ETC) GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.0L(NON ETC) EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD 2.0L(ETC) ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.4L(ETC) GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.4L(ETC) EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.4L(ETC) ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD 3.3L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION
	UNLEAD 3.3L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION
	LEAD 3.3L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
ENGINE(DIESEL)	EURO-4 VGT(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE REGENERATION
AUTOMATIC TRANSAXLE	2.0/2.4L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	3.3L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	EURO-4 VGT(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES

ABS/EPS		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	STEERING ANGLE SENSOR
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
ELEC.CONTROL SUSPENSION		<i>info</i>	<i>err. code</i>	<i>data</i>		
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
SONATA 2005-2006						
ENGINE GASIONE	2.0/2.4L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	2.0/2.4L +ETC	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	LEAD 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0/2.4(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0/2.4L +ETC(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.3 LEAD(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE DIESE	ENGINE CONTROL DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE
	2.0L VGT EURO (DIESIE)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE LPG	2.0 LPI(EMS ECU)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	2.0 LPI(IFB ECU)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM	2.0/2.4L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	LEAD 3.0L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	2.0/2.4(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES

	3.3 LEAD(CAN)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AIRBAG SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.CONTROL SUSPENSION			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON. SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODELE			<i>err. code</i>		<i>actuat.</i>	
IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
SONATA 1999-2004						
ENGINE L4DOHC	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD IMM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LPG(~2002) ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LPG(~2003-) ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD GEN(india)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6DOHC	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	02 UNLEAD IMM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES

	UNLEAD(TI O2S) EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(ZR O2S) EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(TI O2S) OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(ZR O2S) OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD GEN(india)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM	CTC TYPE(9902MY)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	BOSCH TYPE(03MY)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	ABS (India)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG	1999-2001MY	<i>info</i>	<i>err. code</i>	<i>data</i>		
	F/LIFT	<i>info</i>	<i>err. code</i>	<i>data</i>		
	SRS (India)	<i>info</i>	<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM	CTC TYPE (9902MY)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	BOSCH TYPE(03MY)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AHLS SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>		
SONATA 1994-1998						
ENGINE L4SOHC	UNLEAD 1.8L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.8L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	OBD-II 97MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	OBD-II 98MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA II 1.8L SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA II 2.0L SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA III 1.8L SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SONATA III 2.0L SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>		
ENGINE L4DOHC	UNLEAD 1.8L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	OBD-II 97MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	OBD-II 98MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA DOHC GOLD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA II 1.8L DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA II 2.0L DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA III 1.8L SOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SONATA III 2.0L DOHC		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	OLD SONATA		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6SOHC	UNLEAD 3.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 3.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	OBD-II 97MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	OBD-II 98MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>		
STS-AIRBAG			<i>err. code</i>	<i>data</i>		
SONATA 1989-1993						
ENGINE L4SOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4DOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6SOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
GRANDEUR 1994-1998						
ENGINE L4SOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4DOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6SOHD			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6DOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>		
	GRANDEUR (9498MY)		<i>err. code</i>	<i>data</i>		
	NEW 2.0L DOHC		<i>err. code</i>	<i>data</i>		
			<i>err. code</i>	<i>data</i>		
	NEW 2.4L SOHC		<i>err. code</i>	<i>data</i>		
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
	NEW 2.5L DOHC		<i>err. code</i>	<i>data</i>		
			<i>err. code</i>	<i>data</i>		

	NEW 3.0L SOHC		<i>err. code</i>	<i>data</i>		
			<i>err. code</i>	<i>data</i>		
	NEW 3.0L DOHC		<i>err. code</i>	<i>data</i>		
			<i>err. code</i>	<i>data</i>		
	NEW 3.5L DOHC		<i>err. code</i>	<i>data</i>		
			<i>err. code</i>	<i>data</i>		
GRANDEUR 1983-1993						
ENGINE L4SOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6SOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
XG 1999-2005						
ENGINE L4SOHC	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	LEAD(+ETS) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(+ETS) GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD(TI O2S) IMM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(ZR O2S) IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(+ETS) IMM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD(+ETS) OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2.0/2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.0/3.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG	-2002MY	<i>info</i>	<i>err. code</i>	<i>data</i>		
	F/LIFT		<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ECS			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AHLS SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>		
TG GRANDEUR (AZERA)						
ENGINE GASOLINE	2.7L/3.3L/3.8LKWP		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	2.4LCAN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.3L/3.8L KOBDCAN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.7L KOBDCAN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE DIESEL	2.2 VGT EURO 4 DIESEL(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LPI(EMS ECU)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LPI(IFB ECU)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ATUOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	NOMORAL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	NATIONAL AVIGATION AND SPACEFLIGHT STANDARD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER SREERING		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
FULL AUTO AIR/CON.		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SMART KEY SYSTEM	INTERFACE UINT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SMART KEY UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AHLS SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>		
MARCIA 1996-1998						
ENGINE L4DOHC	MARCIA (9698MY)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6DOHC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ATUOMATIC TRANSAXLE	MARCIA (9698MY)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM	MARCIA (9698MY)		<i>err. code</i>	<i>data</i>		
SRS-AIRBAG	MARCIA (9698MY)		<i>err. code</i>	<i>data</i>		
CENTENNIA L 2000-2004						
ENGINE	UNLEAD 3.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 3.0L(+ETS) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 3.5L(+ETS) GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 3.5L(+ETS) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 3.5L(+ETS) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 4.5L GDI ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 4.5L(+ETS) OBDI		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 4.5L MPI GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 4.5L MPI EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	UNLEAD 4.5L MPI OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 4.5L MPI ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	3.0/3.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	4.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM	ITT TYPE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	CTC TYPE(2009~)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG	-2001MY(SDMGH)		<i>err. code</i>	<i>data</i>		
	2002MY-(SRE-SMART)		<i>err. code</i>	<i>data</i>		
VDC	MELCO TYPE					
	CTC TYPE(2009~)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	ITT TYPE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TRACTION CONTROL SYSTEM	CTC TYPE(2009~)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
07.ECS	ECS		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ACTIVE ECS			<i>data</i>	<i>actuat.</i>	
AC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
LAN		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AHLS SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>		
H-100 1994-2001						
ENGINE L4SOHC	UNLEAD 94-96MY ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 97-2000MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 94-96MY ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 97-2000MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 97-98MY M.E		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
H100-TRUCK 1997-2004						
ENGINE L4SOHC	GASOLINE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
H100-TRUCK 2004-						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>		
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed

IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
H-1 2007-						
ENGINE(GASOLINE)	UNLEAD GEN CAN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD EOBD CAN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD ALL CAN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
ENGINE(DIESEL)	T/CHARGER(COVECF)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CRDI(A-ENG) EURO-4 (-CPF)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. ENGINE TEST FUNCTION
	CRDI(A-ENG) EURO-4 (+CPF)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE REGENERATION
AUTOMATIC TRANSAXLE	GASOLINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	T/CHARGER(COVECF)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CRDI(A-ENG) EURO-4	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING AUTO T/A VALUES
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	AIR BLEEDING MODE
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
FUEL FIRED HEATER			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE

	T/CHARGER(COVEC-F)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	CRDI(A-ENG) EURO-4			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
H-1 1998-2004						
ENGINE-GASOLINE 2000MY~	UNLEAD 2.4L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.4L EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 2.4L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE-GASOLINE ~2000MY			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE DIESEL	T/CHARGER(COVEC)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	T/C INTERCOOLER(COVEC)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CRDI(A-ENG)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CRDI(A-ENG)F/LIFT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE FBM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI LOCK BRAKE SYSTEM	2WD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	4WD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS AIRBAG			<i>err. code</i>	<i>data</i>		
FUEL FIRED HEATER			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
IMMOBILIZER	DIESEL(CRDI)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE

	DIESEL(CRDI EURO-4)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
H-1 TRUCK 2001-2003						
ENGINE DIESEL		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS AIRBAG			<i>err. code</i>	<i>data</i>		
SANTAFE 2001-2005						
ENGINE 2.0/2.4L(GASOLINE)	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.0L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.4L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE 2.7L(GASOLINE)	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Idle Speed Adjustment 2.RESETTING ADAPTIVE VALUES
	UNLEAD(TI O2S) GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(ZR O2S) GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Version Configuration
	UNLEAD(TI O2S) EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(ZR O2S) EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Read FreezeFrame Data 2.RESETTING ADAPTIVE VALUES
	UNLEAD(TI O2S) OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Read FreezeFrame Data 2.RESETTING ADAPTIVE VALUES

	UNLEAD(ZR O2S) OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Read FreezeFrame Data 2.RESETTING ADAPTIVE VALUES
ENGINE(DIESEL)	WGT GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	WGT EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	VGT ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM	2WD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	4WD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS AIRBAG	GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>		
	NAS	<i>info</i>	<i>err. code</i>	<i>data</i>		
07.TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
4WD CONTROL		<i>info</i>	<i>err. code</i>			
SANTAFE (CM)06						
ENGINE(GASOLINE)	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION
	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
	UNLEAD OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION
ENGINE(DIESEL)	EURO-3 WGT(KWP)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	INJECTOR SPECIFIC DATA
	EURO-4 VGT -CPF(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. ENGINE TEST FUNCTION
	EURO-4 VGT +CPF(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE REGENERATION
AUTOMATIC TRANSAXLE	GASOLINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	EURO-3 WGT(KWP)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	EURO-4 VGT(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES

ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	STEERING ANGLE SENSOR
SRS-AIRBAG	GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>		
	NAS	<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON.		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE	GENERAL	<i>info</i>		<i>data</i>	<i>actuat.</i>	
	NAS	<i>info</i>		<i>data</i>	<i>actuat.</i>	
4WD CONTROL		<i>info</i>	<i>err. code</i>			
IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	EURO-3 WGT(KWP)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	EURO-4 VGT(CAN)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
TRAJET XG 2001-2004						
ENGINE 2.0L(GASOLINE)	LEAD ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE 2.7L(GASOLINE)	LEAD ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	LEAD(F/LIFT) ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(ZR 02S) GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES

	UNLEAD(TI O2S) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD(ZR O2S) EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
ENGINE(DIESEL)	WGT		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	VGT		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE(LPG)		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2.0(MELCO)/2.7	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0(SIEMENS)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER	2.0(SIEMENS)			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
FUEL FIRED HEATER			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TAXI 1994-2001						
ENGINE L4SOHC FBM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TERRACAN 2001-2007						
ENGINE	2.5L DIESEL(TCI)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.9L DIESEL(C/RAIL)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	INPUT_INJECTOR_DATA
	UNLEAD 3.5L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Read FreezeFrame Data
	UNLEAD 3.5L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Read FreezeFrame Data

	UNLEAD 3.5L OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Read FreezeFrame Data
	LEAD 3.5L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Read FreezeFrame Data
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD CONTROL		<i>info</i>	<i>err. code</i>			
IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHINGCHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
GALLOPER-II ALL						
ENGINE V6SOHC	UNLEAD 3.0L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 3.0L IMM/ME		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 3.0L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 3.0L IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DIESEL(COVEGF)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE SYSTEM LPG	LPG ~1999MY	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LPG 2000MY	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM	~2000MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2001MY BOSCH		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
SANTAMO ALL						
ENGINE L4SOHC	UNLEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4DOHC	UNLEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 2.0L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE LPG		<i>info</i>	<i>err. code</i>	<i>data</i>		
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		

GALLOPER ALL						
ENGINE SYSTEM	2.4L SOHC		<i>err. code</i>			
	3.4L SOHC		<i>err. code</i>			
AVANTE 2004-2005						
ENGINE(GASOLINE)			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AVANTE 2001-2003						
ENGINE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AVANTE 1996-2000						
ENGINE L4SOHC	UNLEAD 1.5L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE L4DOHC	UNLEAD 1.5L 96MY KOR		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.5L 97-98MY KOR		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 1.6-2.0L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 96MY OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 97MY OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 98MY OBDII		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	-99MY(A4BF1)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2000MY(A4BF2)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG			<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
DYNASTY ALL						
ENGINE SYSTEM	DYNASTY 2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DYNASTY 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DYNASTY 3.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM	DYNASTY 2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	DYNASTY 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DYNASTY 3.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM	DYNASTY 2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DYNASTY 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DYNASTY 3.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TIBURON ALL						
ENGINE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AIRBAG SYSYTEM			<i>err. code</i>	<i>data</i>		
ATOZ ALL						
ENGINE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AIRBAG SYSYTEM			<i>err. code</i>	<i>data</i>		
GRANDEUR XG ALL						
ENGINE SYSTEM	GRANDEUR XG 2.0/2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	GRANDEUR XG 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM	GRANDEUR XG 2.0/2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	GRANDEUR XG 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM	GRANDEUR XG 2.0/2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	GRANDEUR XG 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AIRBAG SYSTEM	GRANDEUR XG 2.0/2.5L		<i>err. code</i>	<i>data</i>		
	GRANDEUR XG 3.0L		<i>err. code</i>	<i>data</i>		
ELEC.CONTROL SUSPENSION	GRANDEUR XG 2.0/2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	GRANDEUR XG 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TRACTION CONTROL SYSTEM	GRANDEUR XG 2.0/2.5L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	GRANDEUR XG 3.0L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
EQUUS						
ENGINE SYSTEM	3.0L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.0L +ECS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.5L +ECS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.8L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	4.5L GDI	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	4.5L MPI	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM	3.3/3.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.8L		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	4.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
VDC SYSTEM	MELCO		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CTC TYPE(2009)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM	ITI TYPE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
	CTC TYPE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
AIRBAG SYSTEM	2002 MY (SRESMART)	<i>info</i>	<i>err. code</i>	<i>data</i>		
ECS	ECS		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ACTIVE ECS			<i>data</i>	<i>actuat.</i>	
TCS	ITI TYPE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CTC TYPE(2009)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AC			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
EPS		<i>info</i>	<i>err. code</i>	<i>data</i>		
AHLS		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY	-2002(LAN)	<i>info</i>	<i>err. code</i>	<i>data</i>		
	2002(LAN)	<i>info</i>	<i>err. code</i>	<i>data</i>		
KEY				<i>data</i>	<i>actuat.</i>	
TUCSON 2004-2005						
ENGINE(GASOLINE)	LEAD 2.0L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.0L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.0L OBD-II	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD 2.0L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD 2.7L GEN		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.7L EOBD		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.7L OBD-II		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.7L ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE(DIESEL)	EURO-3 WGT		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	EURO-4 VGT(CAN)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE REGENERATION

	EURO-4 VGT(KWP)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE
AUTOMATIC TRANSAXLE	2.0 EURO-4	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	2.0/2.7L (MELCO TCM)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0L(SIEMENS PCM)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	AIR BLEEDING MODE
SRS-AIRBAG	GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>		
	NATIONAL AVIGATION AND SPACEP	<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD			<i>err. code</i>			
IMMOBILIZER	2.0L GASOLINE			<i>data</i>		01.PASSWORD TEACHING/CHANGING 02.TEACHING 03.NEUTRAL MODE 04.LIMP HOME MODE 05.SMARTRA NEUTRAL
	2.7L GASOLINE			<i>data</i>		01.PASSWORD TEACHING/CHANGING 02.TEACHING 03.NEUTRAL MODE 04.LIMP HOME MODE
	DIESEL			<i>data</i>		01.PASSWORD TEACHING/CHANGING 02.TEACHING 03.NEUTRAL MODE 04.LIMP HOME MODE 05.SMARTRA NEUTRAL
FULL AUTO AIR/CON. SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ETACS	GENERAL	<i>info</i>		<i>data</i>	<i>actuat.</i>	
	NAS	<i>info</i>		<i>data</i>	<i>actuat.</i>	
	CHINA(JMC)	<i>info</i>		<i>data</i>	<i>actuat.</i>	
VERNA						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE DIESEL		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

ANTIFLOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
ELEC.POWER SREERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON. SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING/CHANGING 02.TEACHING 03.NEUTRAL MODE 04.LIMP HOME MODE 05.SMARTRA NEUTRAL
i10						
ENGINE(GASOLINE)	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
ENGINE(DIESEL)		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. ENGINE TEST FUNCTION
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	AIR BLEEDING MODE
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG(india)		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING/CHANGING 02.TEACHING 03.NEUTRAL MODE 04.LIMP HOME MODE 05.SMARTRA NEUTRAL
	DIESEL			<i>data</i>		1.PASSWORD TEACHING/CHANGING 02.TEACHING 03.NEUTRAL MODE 04.LIMP HOME MODE 05.SMARTRA NEUTRAL

i30

ENGINE(GASOLINE)	UNLEAD 1.6L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 1.4/1.6L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD 1.6L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD 1.6L OBD-II	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.0L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	UNLEAD 2.0L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	LEAD 2.0L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	UNLEAD 2.0L OBD-II	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
ENGINE(DIESEL)	1.6 U-ENGINE WITHOUT CPF	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. ENGINE TEST FUNCTION
	1.6 U-ENGINE WITH CPF	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE REGENERATION
	2.0 D-ENGINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE REGENERATION
	1.6 U2-ENGINE WITH CPF	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	1.4/1.6L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	2.0L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	ACU(GEN)	<i>info</i>	<i>err. code</i>	<i>data</i>		
	ACU(NAS)	<i>info</i>	<i>err. code</i>	<i>data</i>		
	WCS	<i>info</i>	<i>err. code</i>	<i>data</i>		
TPMS		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
FULL AUTO AIR/CON	EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		ASP CALIBRATION
BODY CONTROL MODULE	GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	NAS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
IMMOBILIZER	GASOLINE		<i>err. code</i>			

	DIESEL		err. code				
GENESIS							
ENGINE(GASOLINE)	UNLEAD 3.3/3.8L GEN	info	err. code	data	actuat.	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION	
	UNLEAD 3.3/3.8L EOBD	info	err. code	data	actuat.	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION	
	UNLEAD 3.3/3.8L OBDII	info	err. code	data	actuat.	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION	
AUTOMATIC TRANSAXLE	3.3/3.8L	info	err. code	data	actuat.	RESETTING AUTO T/A VALUES	
ABS/ESP/ESC		info	err. code	data	actuat.		
SRS-AIRBAG	ACU(GEN)	info	err. code	data			
	ACU(NAS)	info	err. code	data			
FULL AUTO AIR/CON		info	err. code	data	actuat.		
ELEC.POWER STEERING		info	err. code	data	actuat.		
ELEC.CONTROL SUSPENSION		info	err. code	data			
ELEC.PAKING BRAKE		info	err. code	data	actuat.		
AUTO HEAD LEVELING	AFLS	info	err. code	data	actuat.		
BODY CONTROL MODULE	IPM(IN PANEL MODULE)PIC	info	err. code	data	actuat.		
	IPM(IN PANEL MODULE) +PIC	info	err. code	data	actuat.		
	FAM(FRONT AREA MODULE)	info	err. code	data	actuat.		
	DDM(POWER WINDOW MAIN)	info	err. code	data	actuat.		
	ADM(POWER WINDOW ASSIST)	info	err. code	data	actuat.		
	CLU(CLUSTER)	info	err. code	data	actuat.		
	MFSW(MULTIFUNTION SW)	info	err. code	data	actuat.		
	PSM(POWER SEAT)	info	err. code	data	actuat.		
	SCM(TILT & TELE)	info	err. code	data	actuat.		
	FBWS(FRONT&BACK WARING)	info	err. code	data	actuat.		
	PTM(POWER TRUNK)	info	err. code	data	actuat.		
	ECW(ELEC. CONTROL WIPER)	info	err. code	data	actuat.		
	PDM(POWER DISTRIBUTION)	info	err. code	data	actuat.		
	MULTI MEDIA SYSTEM	HEAD UNIT	info		data	actuat.	
		TUNER/AMP	info	err. code			

IMMOBILIZER				<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
-------------	--	--	--	-------------	--	---

i20

INDIA	ENGINE GASOLINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING ADAPTIVE VALUES
	AUTOMATIC TRANSAXLE SYSTEM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ABS/ESP	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SRS-AIRBAG	<i>info</i>	<i>err. code</i>	<i>data</i>		
	BODY CONTROL MODULE	<i>info</i>		<i>data</i>	<i>actuat.</i>	
	ELEC.POWER STEERING	<i>info</i>	<i>err. code</i>	<i>data</i>		
	IMMOBILIZER			<i>data</i>		1.PASSWORD TEACHING/CHANGING 02.TEACHING 03.NEUTRAL MODE 04.LIMP HOME MODE 05.SMARTRA NEUTRAL
	TPMS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
OUTINDIA	ENGINE(GASOLINE)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING ADAPTIVE VALUES
	ENGINE(DIESEL)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.COMPONENT CHANGE ROUTINE 2.INPUT INJECTOR DATA

		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.COMPONENT CHANGE ROUTINE 2.INPUT INJECTOR DATA
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.SOLENOID VALUES TEST 2.VARIANT CODING
SRS-AIRBAG		<i>info</i>	<i>err. code</i>			
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY CONTROL UNIT		<i>info</i>	<i>err. code</i>		<i>actuat.</i>	
FULL AUTO AIR/CON. IMMOBILIZER		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE 5.SMARTRA NEUTRAL
TPMS		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
Santro 2006-						
ENGINE SYSTEM	UNLEAD 1.0L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete
	UNLEAD 1.1L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete
	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD MEX	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 1.0L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Configuration delete 2.Idle Speed Adjustment
	LEAD 1.1L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Idle Speed Adjustment
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
Santro 2004-2005 ALL						
ENGINE SYSTEM	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD MEX	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

ANTHLOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
Santro 1998-2003 ALL						
ENGINE L4SOHC	UNLEAD GENERAL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD EOBD		<i>err. code</i>	<i>data</i>		
	UNLEAD MEX		<i>err. code</i>	<i>data</i>		
	UNLEAD IMM		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD GENERAL (SANTRO)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD GENERAL (SANTRO)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SAT SYSTEM						
ANTHLOCK BRAKE SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.Air bleed
AIRBAG SYSTEM			<i>err. code</i>	<i>data</i>		
ENGESIS COUPE						
ENGINE(GASOLINE)	UNLEAD 2.0L(TCI) GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE
	UNLEAD 2.0L(TCI) EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE
	LEAD 2.0L(TCI) ALL		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES
	UNLEAD 3.8L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.PCM AUTO DETECTION RESET 3.PCM LOCK(MEC)SETTING
	UNLEAD 3.8L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.PCM AUTO DETECTION RESET 3.PCM LOCK(MEC)SETTING

	LEAD 3.8L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.PCM AUTO DETECTION RESET 3.PCM LOCK(MEC)SETTING 4.IDLE CO ADJUSTMENT
	UNLEAD 3.8L OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.RESETTING ADAPTIVE VALUES 3.PCM LOCK(MEC)SETTING
AUTOMATIC TRANSAXLE	2.0L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING AUTO T/A VALUES
	3.8L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING AUTO T/A VALUES 2.FREEZE FRAME DATA 3.CLEAR CAN LEARNABLE
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.HCU AIR BLEEDING
SRS-AIRBAG	GENERAL	<i>info</i>	<i>err. code</i>			
	NAS	<i>info</i>	<i>err. code</i>			
FULL AUTO AIR/CON.		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TPMS		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL UNIT	GENERAL	<i>info</i>		<i>data</i>	<i>actuat.</i>	
	NAS	<i>info</i>		<i>data</i>	<i>actuat.</i>	
SMART KEY SYSTEM	SMART KEY UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SMART KEY CODE SAVING					
	PDM(POWER DISTRIBUTION)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTO HEAD LEVELING		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER {PIC ONLY}				<i>data</i>		1.PASSWORD TEACHING/CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE 5.SMARTRA NEUTRAL
VERACRUZ 2007-ALL						

ENGINE(GASOLINE)	UNLEAD 3.8L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
	UNLEAD 3.8L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
	UNLEAD 3.8L OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
	LEAD 3.8L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION
ENGINE(DIESEL)		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. ENGINE TEST FUNCTION
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.RESETTING AUTO T/A VALUES 2.ADAPTIVE PROCEDURE OF N RANGE
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	AIR BLEEDING MODE
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD CONTROL		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
POWER TAIL GATE		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY CONTROL MODULE	BODY CONTROL MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DIRVER DOOR MODULE(DDM)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ASSIST DOOR MODULE(ADM)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	IMS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	TILT & TELE SCOPE(TILE)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE

	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
SMART KEY SYSTEM	SMART KEY UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
GRANDEUR						
ENGINE(GASOLINE)	UNLEAD GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
	UNLEAD EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
	LEAD ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET 3.IDLE CO ADJUSTMENT
	UNLEAD OBDII	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.PCM LOCK(MEC) SETTING 2.PCM AUTO DETECTION RESET
ENGINE(DIESEL)	EURO-4 VGT(CAN)		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1. INJECTOR SPECIFIC DATA 2. CPF SERVICE REGENERATION 3. ENGINE TEST FUNCTION
AUTOMATIC TRANSAXLE	GASONLINE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
	DIESEL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T/A VALUES
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	STEERING ANGLE SENSOR
	GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>		
	NAS	<i>info</i>	<i>err. code</i>	<i>data</i>		
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON.		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE	BODY CONTROL MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DRIVER DOOR MODULE(DDM)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	ASSIST DOOR MODULE(ADM)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	IMS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	TILT&TELESCOPE(TILT)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SMART KEY SYSTEM	INTERFACE UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SMART KEY UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AHLS		<i>info</i>	<i>err. code</i>	<i>data</i>		
IMMOBILIZER	GASOLINE			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
	DIESEL			<i>data</i>		1.PASSWORD TEACHING\CHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
TUCSON(IX3)						
ENGINE (GASOLINE)	UNLEAD 2.0L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.0L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 2.0L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.4L GEN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	UNLEAD 2.4L EOBD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	LEAD 2.4L ALL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE (DIESEL)	2.0L LOW POWER(CPF)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0L LOW POWER(CPF+)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0L HIGH POWER(CPF)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2.0L HIGH POWER(CPF+)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON.	GENERAL	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	EUROPE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
4WD CONTROL		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY CONTROL MODULE	ALL SYSTEM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	BCM	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
TPMS		<i>info</i>	<i>err. code</i>	<i>data</i>		
PIC	ALL SYSTEMS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	SMART KEY UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
USA						
TIBURON ALL						
ENGINE L4	2007-	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2005-2006	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2004	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2003	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6	2005-	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	AFTER JAN 1,2003	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	BEFORE JAN 1,2003	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2007-	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2005-2006	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2003-2004	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	1999-2001(June1,1999~)		<i>err. code</i>	<i>data</i>		
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	2007-	<i>info</i>	<i>err. code</i>	<i>data</i>		
	2003-	<i>info</i>	<i>err. code</i>			
	2000-2001	<i>info</i>	<i>err. code</i>			
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTO H/LAMP LEVELLING		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY CONTROL MODULE				<i>data</i>	<i>actuat.</i>	
TPMS	~2007MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2008MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SONATA(YF)10~						
ENGINE 2.0/2.4L		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE GDI		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTH-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

TUCSON ALL						
ENGINE L4		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/TCE/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD CONTROL		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ETACS		<i>info</i>		<i>data</i>	<i>actuat.</i>	
TPMS	~2007MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2008MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELANTRA(HD) 06						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESC		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2007MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELANTRA 01-06						
ENGINE	2005-2006	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2004	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2003-2004(SULEV)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2003-2004(NO SULEV)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2001-2002	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2005-2006	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2003-2004(SULEV)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2003-2004(NO SULEV)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2001-2002	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	2004-	<i>info</i>	<i>err. code</i>	<i>data</i>		
	-2003		<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

SANTAFE(CM) 06						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.PCM LOCK(MEC) SETTING 3.VIN READING 4.RESETTING ADAPTIVE
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.RESETTING AUTO T_A VALUES
ABS/ESC		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.VARIANT CODING 2.SAS SENSOR ZERO SETTING
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		PODS RESET
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
4WD CONTROL			<i>err. code</i>			
IMMOBILIZER				<i>data</i>		TEACHINGCHANGING 2.TEACHING 3.NEUTRAL MODE 4.LIMP HOME MODE
TPMS	~2008MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2009MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SANTAFE 01-06						
ENGINE L4	2005	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.VIN READING
	2001-2004	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	FREEZE FRAME DATA
ENGINE V6	20053.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	1.FREEZE FRAME DATA 2.VIN READING
	2003-20043.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	FREEZE FRAME DATA
	20052.7L		<i>err. code</i>		<i>actuat.</i>	1.AT&TCS ADAPT CORRECTION 2.RESETTING ADAPTIVE VALUES 3.VIN READING

	2003-20042.7L		<i>err. code</i>		<i>actuat.</i>	1.AT&TCS ADAPT CORRECTION 2.RESETTING ADAPTIVE VALUES
	20022.7L		<i>err. code</i>		<i>actuat.</i>	1.AT&TCS ADAPT CORRECTION 2.RESETTING ADAPTIVE VALUES
AUTOMATIC TRANSAXLE	20053.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	RESETTING AUTO T A
	2003-20043.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	20052.4L/2.7L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	20042.4L/2.7L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM	2WD	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	HCU AIR BLEEDING
	4WD2.4L/2.7L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	HCU AIR BLEEDING
	4WD3.5L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	HCU AIR BLEEDING
SRS-AIRBAG	2005	<i>info</i>	<i>err. code</i>	<i>data</i>		PASSENGER AIRBAG STATUS
	2001-2004	<i>info</i>	<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	HCU AIR BLEEDING
4WD CONTROL		<i>info</i>	<i>err. code</i>			
ACCENT(MC) ALL						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTHLOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TPMS	2008MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELANTRA TOURING						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESC		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	AIRBAG CONTROL UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>		
	WEIGHT CLASSIFICATION	<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
TPMS	2008~	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
GENESIS ALL						
ENGINE V8		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	LAMBDA	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESC		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ELEC.PAKING BRAKE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTO HEAD LEVELING	AHLS	<i>info</i>	<i>err. code</i>	<i>data</i>		
	AFLS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	IN PANELMODULE-PIC	<i>info</i>	<i>err. code</i>	<i>data</i>		
	IN PANELMODULE +PIC	<i>info</i>	<i>err. code</i>	<i>data</i>		
	FRONT AREA MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE	POWER WINDOW MAIN	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	POWER WINDOW ASS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	CLUSTER	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	MULTIFUNTION SWITCH	<i>info</i>	<i>err. code</i>	<i>data</i>		
	SMARTRA2	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	TILT & TELE MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	FRONT&BACK WARNING	<i>info</i>	<i>err. code</i>	<i>data</i>		
	ELEC.CONTROL WIPER	<i>info</i>	<i>err. code</i>	<i>data</i>		
	POWER DISTRIBUTION	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
MULTI MEDIA SYSTEM	HEAD UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	TUNER/AMP	<i>info</i>	<i>err. code</i>			
	SDS	<i>info</i>	<i>err. code</i>			
TPMS	2008MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AZERA ALL						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE	BODY CONTROL MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DRIVER DOOR MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	ASSIST DOOR MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	IMS	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	TILT & TELESCOPE(TILT)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTO H/LAMP LEVELLING		<i>info</i>		<i>data</i>		
TPMS	2007MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
GENESIS COUPE						
ENGINE L4		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	THETA	<i>info</i>	<i>err. code</i>	<i>data</i>		
	LAMBDA	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
SMART KEY SYSTEM	SMART KEY UNIT	<i>info</i>		<i>data</i>	<i>actuat.</i>	
AUTO HEAD LEVELING		<i>info</i>	<i>err. code</i>	<i>data</i>		
SONATA(F/L)07-						
ENGINE L4		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2.4L(ETC)	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.3L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	AIRBAG CONTROL UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>		
	WEIGHT CLASSIFICATION	<i>info</i>	<i>err. code</i>	<i>data</i>		
ELEC.POWER STEERING		<i>info</i>		<i>data</i>		
FULL AUTO AIR/CON.		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>		<i>data</i>	<i>actuat.</i>	
TPMS	2009MY~	<i>info</i>		<i>data</i>	<i>actuat.</i>	
XG 300/350 ALL						
ENGINE V6	2005	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	2001-2004	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2005	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2001-2004	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ANTI-LOCK BRAKE SYSTEM		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	2004-	<i>info</i>	<i>err. code</i>	<i>data</i>		
	2003	<i>info</i>	<i>err. code</i>	<i>data</i>		
TRACTION CONTROL SYSTEM			<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
VERACRUZ ALL						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	AIRBAG CONTROL UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>		
	WEIGHT CLASSIFICATION	<i>info</i>	<i>err. code</i>	<i>data</i>		
4WD CONTROL		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
POWER TALL GATE		<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY CONTROL MODULE	BODY CONTROL MODULE	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SMART KEY SYSTEM	SMART KEY UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TPMS	~2008MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2009MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENTOUBAGE ALL						
ENGINE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG	AIRBAG CONTROL UNIT	<i>info</i>	<i>err. code</i>	<i>data</i>		
	WEIGHT CLASSIFICATION	<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
POWER SLIDING/TALL GATE	POWER SLIDINGLH	<i>info</i>	<i>err. code</i>	<i>data</i>		
	POWER SLIDINGRH	<i>info</i>	<i>err. code</i>	<i>data</i>		
	POWER TALL GATE	<i>info</i>	<i>err. code</i>	<i>data</i>		
BODY CONTROL SYSTEM	IN PANEL MODULE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	FRONT AREA MODULE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	REAR AREA MODULE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	DRIVER DOOR MODULE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	

	ASSIST DOOR MODULE		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	INTEGRATED MEMORY SEAT		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TPMS	~2008MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2009MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SONATA 06-NF						
ENGINE L4		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ENGINE V6		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
AUTOMATIC TRANSAXLE	2.0/2.4	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	3.3L	<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
ABS/ESP		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
SRS-AIRBAG		<i>info</i>	<i>err. code</i>	<i>data</i>		
ELEC.POWER STEERING		<i>info</i>	<i>err. code</i>	<i>data</i>		
FULL AUTO AIR/CON.		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
BODY CONTROL MODULE		<i>info</i>	<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
TPMS	~2007MY		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	
	2008MY~		<i>err. code</i>	<i>data</i>	<i>actuat.</i>	